

popup™ Billy

240V Compact Kettle

Part No.:COMP10434BL



Instruction Manual

IMPORTANT

Please read instructions carefully. Familiarise yourself with the appliance before use.
Keep these instructions for future reference.



PARTS LIST

- 1. Lid
- 2. Press button for lid release
- 3. Handle
- 4. Silicone body
- 5. ON/OFF black power button
- 6. Base
- 7. Power cord with plug
- 8. Spout



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. To protect against electrical hazards do not immerse the power cord, plug, power base, or kettle in water or any other liquid.
2. Do not use in the bathroom or near any source of water. Do not use outdoors.
3. Always hold the kettle only by its handle as some parts may be hot.
4. This kettle is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
6. Always turn off and unplug from the power outlet before cleaning the kettle.
7. Turn the power off at the wall power outlet when not in use.
8. To disconnect, turn off the wall power outlet, then grasp and pull the plug from the wall outlet. Never pull by the cord.
9. Do not operate this kettle with a damaged cord/plug or after the kettle has malfunctioned, been dropped or damaged in any manner. Contact Customer Service for replacement, examination, repair or adjustment.
10. There are no user serviceable parts. If power cord is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
11. **CAUTION:** Do not use on an inclined plane or unstable surface.
12. **CAUTION:** Do not move the kettle while it is switched on.
13. Ensure the lid is properly closed before each use or the kettle may not switch off once boiled.
14. Do not open the lid while the water is heating or boiling.
15. Always take care when pouring. Pour slowly, do not over-tilt the kettle.
16. The scalding hazard remains long after the water has boiled. Keep the kettle and the power cord away from the edge of tables or countertops and out of reach of children.
17. Only use the kettle with the power cord provided.
18. Do not place on or near any heat sources.
19. Do not use this kettle for other than its intended purpose of heating water. Do not use with any other liquid.
20. Ensure kettle is fully upright before use and not in the collapsed position.
21. Do not switch on the kettle unless there is at least one cup of water inside.
22. Do not fill past 'max', level otherwise boiling water may spill from the spout.

23. Do not leave the kettle unattended when in use or where it may be touched by children or infirm persons.
24. Ensure kettle is empty and cool to touch before compacting and storing away.
25. **CAUTION:** To prevent damage to the kettle, do not use alkaline cleaning agents or harsh abrasives when cleaning this kettle. Follow the instructions in the 'Care Instructions' section when cleaning this kettle.
26. This kettle is not a toy. Children should be supervised to ensure they do not play with the kettle.
27. This kettle is not intended to be operated by means of an external timer or separate remote control system.
28. De-scale the kettle regularly to ensure proper operation.
29. Avoid touching the surface of the hot kettle, use the handle only.
30. To avoid possible steam damage, do not face the spout when operating the kettle.
31. If operated on wood furniture, place a protective pad under kettle to prevent damage to delicate surfaces.
32. To avoid scalding, always ensure the lid is correctly positioned before operation.
33. Scalding may occur if the lid is removed while heating.
34. Remove and replace the lid carefully when hot.
35. Keep kettle away from sharp objects.

Keep these instructions for future reference.

This kettle is for household use only.

BEFORE FIRST USE

1. Fill the kettle with water to the 'max' level, boil, discard the water and then rinse. Do this three times, to remove any dust, residues, etc., from the kettle.
2. The kettle should always be unplugged when filling or adding water.
3. Fill the kettle with water to the desired level. Do not overfill or there will be a risk of spillage. The water level indicator will assist you to measure the correct amount. You can fill the kettle via the spout or after opening the lid. Do not forget to close the lid after filling, otherwise the kettle will not automatically switch off after use.
4. Do not fill with less than minimum capacity, to "min" indication, to prevent the kettle running dry while operating.
5. Do not fill past the 800ml of water max level.
6. An automatic safety cut-out has been fitted for protection against overheating, it will operate if the kettle is switched on whilst containing insufficient water. Always ensure the water inside the kettle covers the minimum mark on the water level indicator gauge. If the automatic safety cut-out has operated, switch the kettle off, disconnect from the power outlet and allow the kettle to cool down for 5 to 10 minutes. Refill kettle with water and switch on. Kettle will work as normal.

POSITIONING

- Open up the kettle to a full upright position.
- Place the kettle base on a stable, level surface.
- Position the cable so it does not overhang and cannot be caught or tripped over.

**DO NOT attempt to boil water when kettle is collapsed.
Keep clear when kettle is operating as steam may escape from the lid.**

BASIC OPERATION

1. Put the kettle on a dry, smooth level surface.
2. Insert the plug into the 240V power socket.
3. Press the black “power” (I) button, the indicator light will illuminate to show that the kettle is operating.



4. When the water has boiled, the kettle will stop working automatically. The indicator light will turn off.
5. Make sure you unplug the kettle before pouring the water.

COLLAPSING THE KETTLE

Before collapsing the kettle make sure:

1. Kettle is unplugged from the wall socket.
2. All water has been removed.
3. Kettle is cool to touch.



Begin by pushing down along the edge of the first fold of the silicone at the base of the kettle.



Continue pressing down along the edge until the first fold of the silicone is fully collapsed.



Push the lid down at the spout.



Press the handle down to fully collapse the kettle.

CARE INSTRUCTIONS

Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or cleaners.

Never immerse the kettle in water or other liquids. Do not place in a dishwasher or microwave.

From time to time, depending on the nature of your water supply, a boiled scale deposit can naturally form and can usually adhere to the heating element thus reducing the heating efficiency.

The amount of boiled scale deposited and subsequently the need to clean or rescale, largely depends on the water hardness in your area or the frequency with which the kettle is used.

Boiled scale is not harmful to your health. But if poured into your beverage, it can give it a powdery taste. Therefore, the kettle should be descaled periodically as indicated below.

DESCALING

Descalate kettle regularly if used frequently, at least twice a year

1. Fill the kettle up to “max” level with a mixture of one part ordinary vinegar and two parts water. Switch on and wait for the appliance to switch off automatically.
2. Let the mixture remain inside the kettle overnight.
3. Discard the mixture the next morning.
4. Fill the kettle with clean water up to “max” mark and boil again.
5. Discard the boiled water to remove any remaining scale and vinegar.
6. Unplug kettle from power source.
7. Rinse the inside of the kettle with clean water.

WARNING

Always disconnect the kettle from the power outlet before cleaning. Do not place in dishwasher. Never immerse the kettle in water. All connections and sockets must be kept dry. Take particular care not to damage parts during cleaning.

RESPONSIBLE DISPOSAL

At the end of its working life, do not throw this kettle out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

SPECIFICATIONS

Voltage: 220-240V~50/60Hz

Power: 900-1100W

Dimensions of unit (Up): 205L x 140W x 175Hmm

Dimensions of unit (Down): 205L x 140W x 95Hmm

Net Weight: 540g (empty)

Cord Length: 77cm

For further information please contact
our customer service department on

Phone: 1300 555 197

Email: service@companionbrands.com.au



Distributed by

Companion Brands

Bundoora Victoria 3083

www.companionbrands.com.au