

EVAKOOL®

INSTRUCTION MANUAL

FOR MODEL
DC40 DRAWER FRIDGE



CHILLED FOR GOOD TIMES

Please read operating manual carefully before using your unit.

Please keep manual in a safe place.

If lost find a digital copy at Evakool.com.au or contact Evakool on (07) 5492 5495.

Contents

1	Safety Instructions	4
2	Notes On Using The Product	4
3	Operation	4
4	Cleaning & Maintenance	6
5	Troubleshooting	6
6	Installation Instructions	8
7	International Certification Approvals	9
8	Dimensions.....	10
9	Parts.....	11

Key Product Features

- Powered by 12 Volt DC Compressor.
- Reliable electronics, high efficiency, low energy consumption.
- Built-in drawer compartment.

1 Safety Instructions

- Warning: Do not use your unit if any cabling is damaged, frayed or exposed.
- Warning: Do not attempt or continue to operate your unit if it is wet.
- When using the unit ensure the circuit being used has a fuse or circuit breaker, recommended size for DC 12 Volt is 15 Amp, DC 24 Volt is 7.5 Amp.
- Make sure the voltage is within the correct range for socket and cable being used.
- Do not place any electrical devices inside the refrigerator as they may be damaged.

2. Notes On Using The Product

- Your unit requires good ventilation, especially around the vents of the refrigerator; allow a gap of at least 100mm around all vents.
- Do not allow a large amount of frost to build up on the inside walls as this may impair cooling. Defrost by turning the unit off, allowing the frost to melt and wiping out the water.
- The lower the ambient temperature, the lower the power usage. In order to maximise efficiency keep the unit in a cool location out of direct sunlight.
- It is recommended to operate the unit on a flat surface, but it will operate at angles up to 30°.


3. Operation

- **Power:** DC (12 and 24 Volt)
- Cable Length Specification





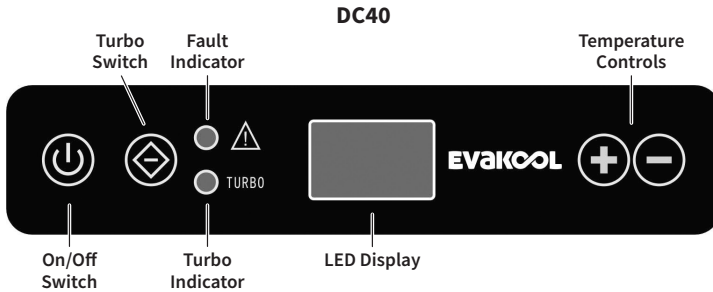

The DC cables must have a suitable cross-section for their length (measured from the battery to the unit), according to this table:

Cable Thickness (Area)		12V Max Cable Length		24V Max Cable Length	
(mm ²)	AWG	(m)	(ft)	(m)	(ft)
2.5	14	2.5	8	5	16
4	12	4	13	8	26
6	10	6	20	12	39
10	8	10	33	20	66

LED Control Panel



Temperature setting range: -18°C to 10°C.

- Plug in the DC power cable.
- Press  button to turn on unit. The LED display on the control panel will turn on and the interior temperature is displayed.
- Press the button  or  button to adjust the temperature the unit aims to achieve. Press the button  to increase or the button  to decrease the temperature.
- Press the  button for Turbo mode to increase the speed of the compressor. This setting can be used when you need to cool product quicker.
- If the power supply is cut off or disconnected, the unit will switch off automatically and once the power supply is restored it will automatically switch back on.

4. Cleaning & Maintenance

- Clean the appliance inside and out with a clean damp cloth every week. If it is dirty, use sodium bicarbonate dissolved in lukewarm water to clean the unit.
- Never use abrasive products, detergents or soap. After cleaning, wipe out with a clean damp cloth and dry carefully.
- Do not store product inside unit if the unit is not on
- Do not store the unit if it is wet inside or without leaving the lid open.
- Never clean the unit under running water or in dish water. Do not use abrasive cleaning agents or hard objects during cleaning as these can damage the unit.

5. Troubleshooting

The Unit is Not Turning On

- Check whether the unit has been turned on.
- Check the power supply (try a different power source/vehicle/socket).
- Check whether the plug and the socket have a good connection.
- Check whether the fuse has been burned out or blown.

Low Refrigeration Performance

- Too much product been placed inside the unit.
- There is too much warm product inside the unit .
- The lid is unlatched / or open.
- The lid seal is broken.
- Problems arising from poor ventilation (allow 100mm of space around all vents).
- The ambient temperature is too high.
- The temperature setting is too high.

Yellow Fault Light Flashing

1 Flash every 4 seconds: Low Voltage

- Try on different power source (vehicle or 240V AC power). If changing power source fixed issue, then possible issue with original power source.
- Ensure cabling between fridge and battery is at least 4mm, if the distance is more than 2 metres then use at least 6mm cable.

2 Flashes every 4 seconds: Fan Issue

- Fan is drawing too many amps (over 0.5 amps), replace fan.

3 Flash every 4 seconds: Compressor Start Issue

- Unplug cable and allow unit to rest for 10 minutes.
- Try on different power source (vehicle or 240V AC power).
- Electronic box fault.
- Compressor fault.

4 Flash every 4 seconds: Low Motor Speed

- Reduce products / items inside unit.
- Move so unit is in a lower ambient temperature clean vents / ensure clear air flow over compressor.
- Fan fault.

5 Flash every 4 seconds: Over Temperature

- Ambient temperature too high.
- Clean vents / ensure clear air flow over compressor.
- Fan fault.

Can hear the sound of running water from inside the unit

- This is normal, due to the flow of refrigerant in the unit.


Unusual noise when refrigerator is working

- The refrigerator is not placed on a level surface.


If none of the above solves your issue please contact Evakool on 07 5492 7777 or warranty@evakool.com for details of your closest Evakool service centre.

6. Installation Instructions


- a. Remove the mounting frame from the fridge.
- b. Locate the mounting frame into the position you wish to install the fridge.
- c. Use the screws provided to fix the mounting frame to the base.

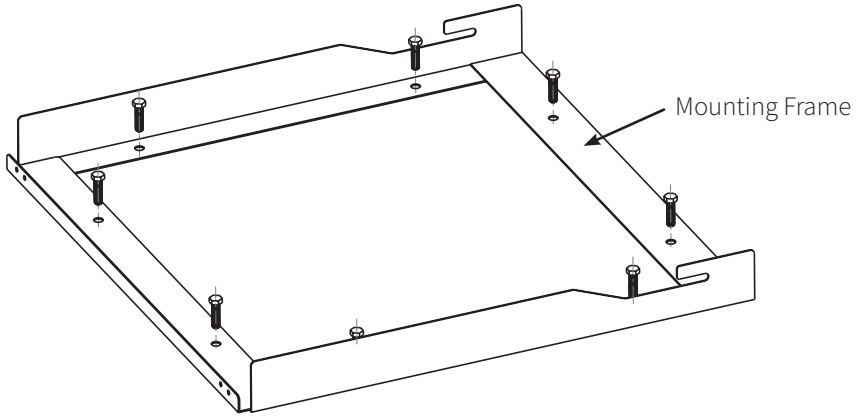

- d. Insert the drawer fridge onto the mounting frame. Ensure the locating lugs are securely inserted into the locating slots.

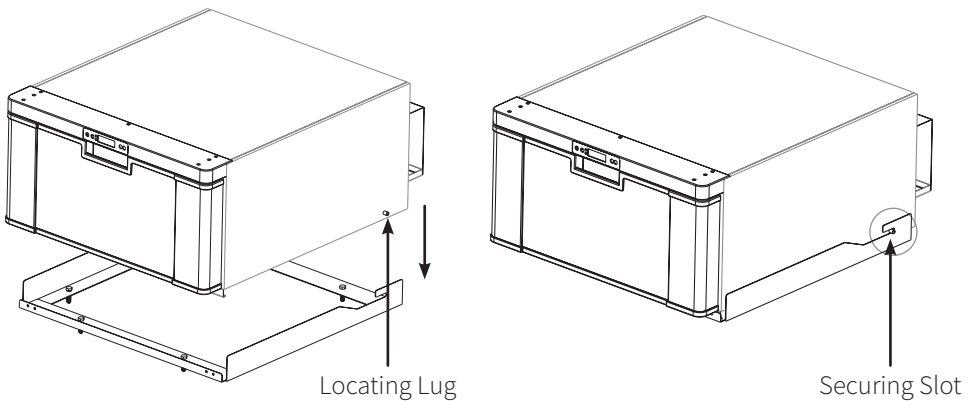


e. Using the 4 screws provided, secure the fridge to the mounting frame as shown below.

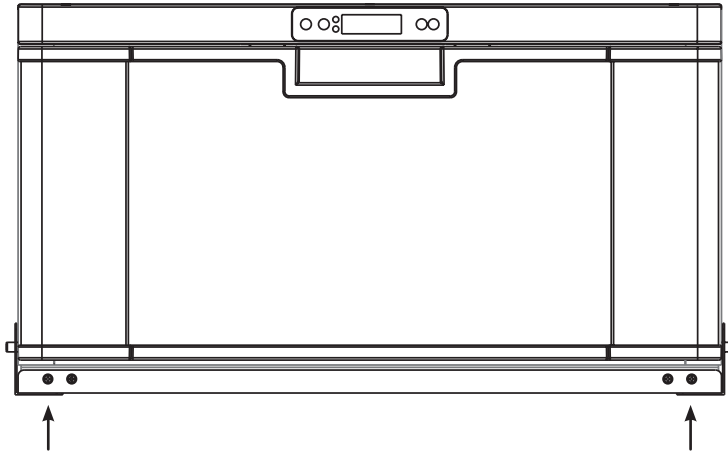


7. International Certification Approvals



8. DC40 Dimensions

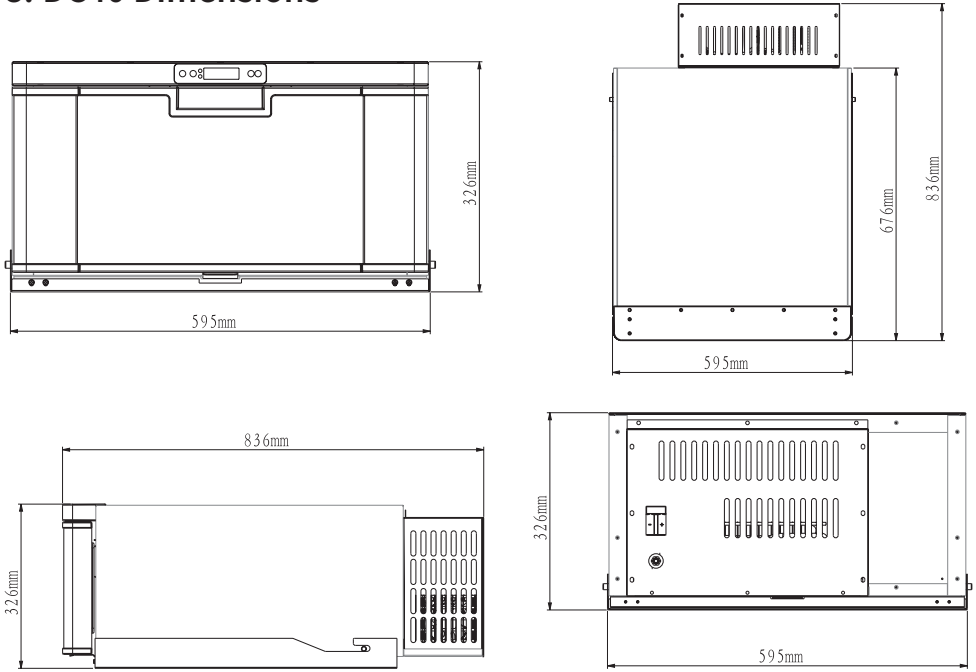

9. DC40 Parts

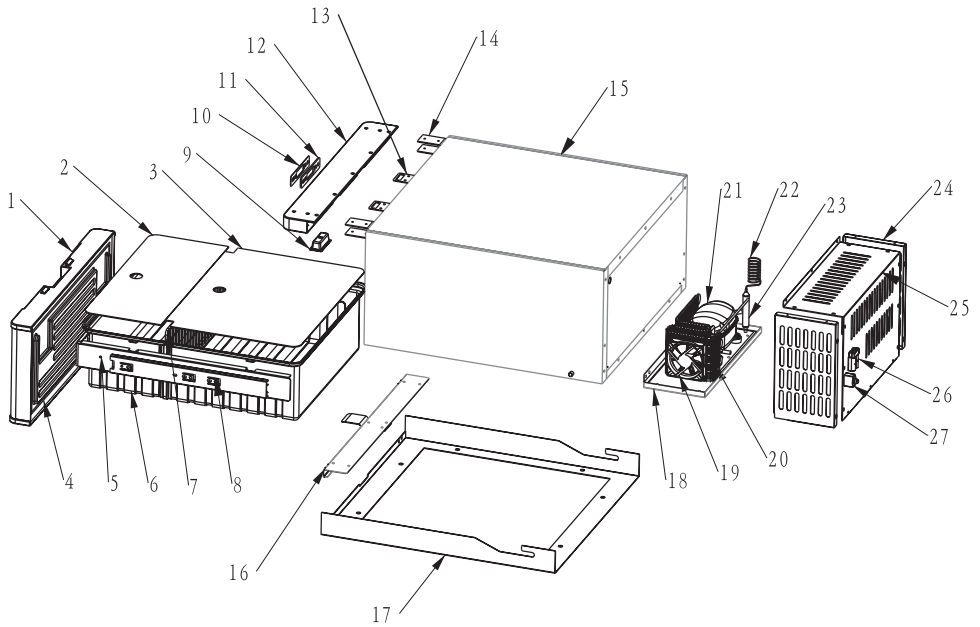

1	40DR - 80DR - 001	Door	15	40DR - 001	Cabinet
2	40DR - 80DR - 002	Acrylic-Front	16	40DR - 80DR - 015	Fixed Bracket 1
3	40DR - 80DR - 003	Acrylic-Rear	17	40DR - 80DR - 016	Fixed Bracket 2
4	40DR - 80DR - 004	Door Gasket	18	40DR - 80DR - 017	Compressor Base Board
5	40DR - 80DR - 005	Cabinet Bracket	19	40DR - 80DR - 018	Fan
6	40DR - 80DR - 006	Cabinet	20	40DR - 002	Condenser
7	40DR - 80DR - 007	Shelf	21	40DR - 80DR - 019	Compressor
8	40DR - 80DR - 008	Track	22	40DR - 80DR - 020	Capillary
9	40DR - 80DR - 009	LED Light	23	40DR - 80DR - 021	Dryer
10	40DR - 80DR - 010	Display Sticker	24	40DR - 80DR - 022	Left & Right Cover Board
11	40DR - 80DR - 011	Display Board	25	40DR - 80DR - 023	Rear Cover Board
12	40DR - 80DR - 012	Top Plastic Cover	26	40DR - 80DR - 024	50A Plug
13	40DR - 80DR - 013	Door Lock Panel	27	40DR - 80DR - 025	Circuit Breaker
14	40DR - 80DR - 014	Metal Bracket for Top Cover			

EVAKOOL®

CHILLED FOR GOOD TIMES

For your nearest stockist contact EvaKool

T: 1300 385 665 (1300 EVKOOL)

E: warranty@evakool.com

or visit us at evakool.com.au