

POWER COOKER & STOCKPOT SET

Instruction Manual

Part No. COMP7012



IMPORTANT

Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.



Gas Safety
Certified

AS 2858:2008
Cert. GSCS20238
SAI Global

GENERAL WARNINGS

- This appliance shall only be connected to a cylinder with a POL gas cylinder valve certified to AS2469 standards.
- This appliance is designed for outdoor use only and must be operated a minimum of 1500mm from any flammable material or surfaces and materials.
- This appliance is to be stored in a dry and well ventilated location free from direct sunlight.
- Do not store when valve is still connected to the cylinder.
- Make sure that the cylinder is disconnected and is stored in a well ventilated area, free from direct sunlight, heat and ignition sources.
- If cylinder is being stored indoors, ensure that the indoor storage location complies with the standard AS / NZS1596
- This appliance must only be serviced by an authorised service agent, return to your place of purchase for service and repair.

IMPORTANT

**Read these instructions for use carefully.
Familiarise yourself with the appliance before connecting it to a gas container.
Keep these instructions for future reference.**

DANGER!

- During operation all surfaces will be extremely hot and should not be touched or handled.
- Do not use the appliance if it has a leak, worn, deteriorated or damaged seals.
- Handle with care even after brief use, always pick up using the legs not the cylinder.
- It may be hazardous to attempt to fit other types of gas containers or cartridges.
- Use only in well ventilated areas.
- Always operate appliance a minimum of 1500mm from flammable materials and walls, and a minimum of 2700mm from ceiling.
- Do not use adaptors or modify appliance to fit other connectors or cylinders.
- Do not modify appliance.
- Do not use multiple appliances to heat a single utensil.
- Children must be supervised by an adult at all times.

- Never leave appliance unattended when operating.
- Use as a cooking appliance only, not to be used as heater or modified for any other reason.
- Avoid boil over and spills on to burners.
- Not suitable for marine environment.

CARBON MONOXIDE HAZARD

This appliance produces carbon monoxide which has no odour. Using the appliance in enclosed spaces, for example; caravan, car, boat or mobile home could cause **DEATH**.

IMPORTANT

- Keep children away from appliance at all times.
- Surfaces of the appliance will become hot during operation, please take care when handling or moving the appliance.
- Do not move appliance during cooking, allow to cool completely.
- Appliance is to be used on a stable, level, flat, non-flammable surface. The appliance should be protected from direct drafts and in a well ventilated place.
- Only cooking vessels with a minimum diameter of 220mm and no wider than 350mm diameter are to be used with this appliance.
- Take care that the control valves and primary air intakes located on the burner tube of this appliance are not obstructed, or that air flow is restricted by placing items or other appliances close to or adjacent to the inlets.
- If you smell gas, immediately turn the gas off at the cylinder and move the appliance and cylinder to a well ventilated area outside, keeping well away from sources of heat such as naked flames and pilot lights.
- Do not attempt to move or relocate the appliance when it is operating, extinguish the burner and allow to cool, disengage the gas cylinder then move the appliance.

CHECKING FOR GAS LEAKS

- Check that all connections are tight and that the gas cylinder connection has been tightened before you turn the cylinder gas valve on.
- **NEVER** check for leaks with a flame or pilot light.
- Using soapy water, coat all connections, if bubbles appear turn the cylinder gas control off and retighten the connection before re-testing.

- Inspect the appliance regularly for signs of wear, leaks or incorrect operation. If symptoms such as flaring of the burner, issues with lighting, damages to hoses or connections or leaks from seals or gas controls are identified do not attempt to repair, return to your authorised stockist for service and maintenance.
- To check if gas remains in the cylinder, disconnect from the appliance and hold the cylinder in a vertical position then shake from side to side, if there is a sound or feel of liquid movement inside, the cylinder contains gas.
- When changing gas cylinders ensure this is conducted outside in a well ventilated location free from people, animals and ignition sources such as naked flames, pilot lights and electrical equipment with heaters or elements.






SAFE APPLIANCE LOCATIONS

This appliance must only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage is rapidly dispersed by wind and natural convection.

Any enclosure in which the appliance is used should comply with one of the following:

- (A) An enclosure with walls on all sides, but with no overhead cover.
- (B) Within a partial enclosure that includes an overhead cover and no more than two walls.
- (C) Within a partial enclosure that includes an overhead cover and more than two walls, the following must apply:
 - (1) At least 25% of the total wall area is completely open.
 - (2) 30% or more in total of the remaining wall side, back and front wall areas is open and unrestricted.
 - (3) In the case of balconies, 20% or more of the total wall area must remain open and unrestricted.

The following figures are diagrammatic representations of outdoor areas. Rectangular areas have been used in these figures - the same principles apply to any other shaped areas.

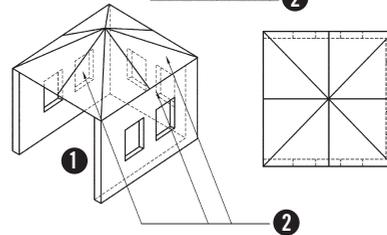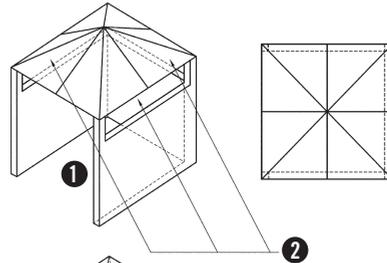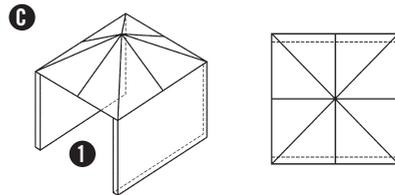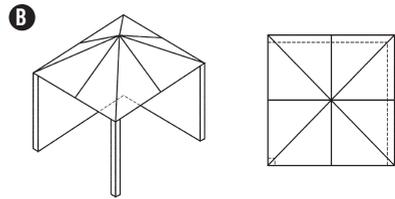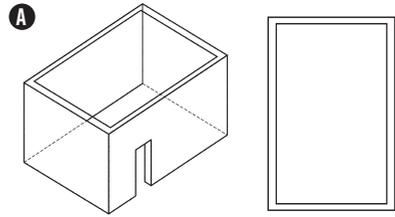

REQUIRED TOOLS

Adjustable spanner




PARTS LIST

1. Storage Bag
2. Cooker Frame
3. Pot & Basket
4. LP Hose/Regulator
5. Basket Lifter
6. Heat Reflector
7. Burner Assembly & Wing Nut
8. Gas Control Assembly
9. Thermometer



1. ASSEMBLY

Review the contents of the package.
Make sure all listed components are included.

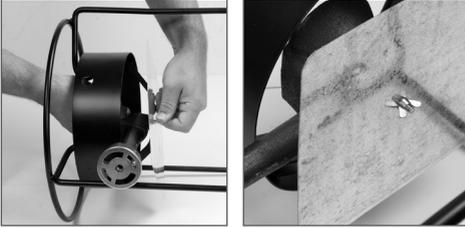

1. Install the burner and reflector plate into the steel frame, using the wing nut.



2. Align the male end fitting on the Gas Control Assembly to the venturi tube on the burner and screw in the internal thread on the burner. Use an adjustable spanner to tighten until tight.

Take care not to overtighten as this will strip the thread in the burner tube.


Note:

Once connected, the gas control does not need to be removed for storage or when packed away.

2. CONNECTION

Your cooker is designed to connect directly to a gas cylinder with a POL connector using the specially designed LP Gas hose and regulator.

1. Check that the cylinder gas control is in the "OFF" position (turned fully clockwise)

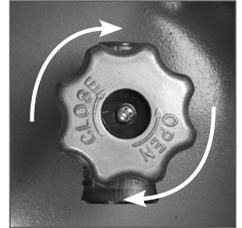

2. Take the hose and attach to the gas inlet on the appliance, tighten up using a spanner. **DO NOT** use fingers to tighten connection.



3. Attach the other end of the hose with the regulator to the gas cylinder, tightening using the two finger support posts.





4. Check that gas control on cooker is turned "OFF", then turn the cylinder gas valve on in an anti-clockwise direction for one full turn and then check the connections for leaks with soapy water.



If a leak is detected turn the cylinder gas valve "OFF" and retighten all connections then retest.

3. LIGHTING THE COOKER

1. Turn the gas cylinder valve on in an anti-clockwise direction for one full turn.

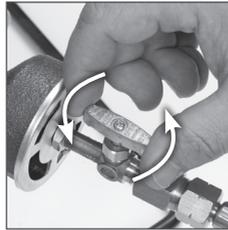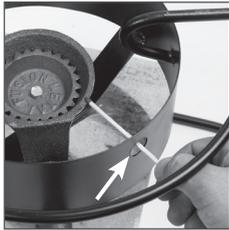


2. Using long BBQ matches or gas lighter, position close to the edge of the burner to be ignited, slowly turn the gas control in an anti-clockwise direction approximately $\frac{1}{4}$ of a turn.
3. If the burner does not ignite, turn the gas control in the clockwise direction to the "Off" position and allow the residual gas to disperse before attempting to reignite the burner.

Note:

Locate the gas cylinder away from your cooker to ensure it is not subjected to radiant heat.

4. ADJUSTING HEAT OUTPUT

1. Turn the gas control in an anti-clockwise direction to achieve a higher flame and in the clockwise direction for a lower flame.

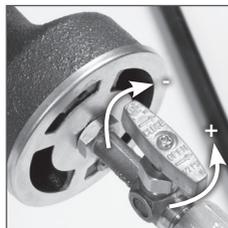

5. TURNING THE COOKER OFF

If the appliance is no longer to be used and to reduce the risk of blocked gas jets caused by excess gas being left in the hose, all remaining gas must be expelled from the hose assembly.

1. With the flame still operating, turn the valve on the gas cylinder in the clockwise direction until it is off. Allow the flame to burn down then extinguish once all remaining gas in the hose has been used.
2. Turn the gas controls on the appliance clockwise to the "Off" position.



6. PACKING

When packing the cooker away ensure that it has cooled and there are no areas of heat.

1. Disconnect the LP Gas hose from the gas control assembly. The gas control assembly does not need to be removed from burner tube.
2. Unscrew wing nut on base of burner and remove reflector plate and burner assembly from cooker frame.



3. Place basket inside pot then position cooker frame over pot and allow to slide inside.



4. Place burner, reflector plate, hose and regulator assembly into the pot and install lid on top the place inside storage bag.

CARE INSTRUCTIONS

Using warm soapy water with a mild detergent wipe down all surfaces and areas of the appliance, taking care not to allow water to enter the burner outlets or aeration holes located in the burner tube.

DO NOT submerge the appliance in a sink or bowl
DO NOT use abrasive cleaners or bleach

MAINTENANCE AND SERVICE

- During operation if it is noted that the burner flame is unstable, is changing colour from Blue to Yellow or has a distinct smell it is important that you take the appliance to your local authorised gas appliance repairer for inspection.
- Periodically check the gas control is tight and has no leaks, follow the testing for leaks procedure. Check the gas hose & regulator for any signs of wear, cuts or fraying, if identified replace immediately with a Gas Certified replacement hose and/ or regulator
- For further information or assistance please contact customer service.

SPECIFICATIONS

POWER COOKER & STOCK POT SET	
Manufacturer	Primus Australia
Part No.	COMP7012
Injector size	1.18mm
Consumption	110Mj/hr - 2180g/hr
Size	350L x 350W x 437Hmm
Weight	7.5kg
Certificate Number	GSCS20238

For more information contact
Customer Service on 1300 555 197

Distributed by
PRIMUS AUSTRALIA Pty Ltd
Bundoora Victoria 3083
www.companionleisure.com.au