

COMPANION

SET UP INSTRUCTIONS

TENT FAN WITH LED LIGHT

Part No. COMP456



IMPORTANT : Please read this instruction manual carefully before operating the unit. Charge the battery for a minimum of five hours before first use or if unit has not been used for a long period of time. If unit is being stored away for a long period of time without use, remove battery from unit before storing unit. To maximise battery life, it is recommended to fully charge the battery every three months

AUSTRALIA'S ORIGINAL OUTDOOR BRAND

TO RECHARGE BATTERY



1. Ensure unit is switched off prior to charging



2. Connect the USB or DC adaptor (included) to unit



3. Red light will be illuminated on unit to indicate battery is charging



4. Red light will switch to green once fully charged

FAN OPERATION



1. To switch on fan and select speed press the fan button once for LOW and twice for HIGH



2. To switch fan off press for a third time

LIGHT OPERATION



1. To switch on light and select the brightness press the light button once for LOW and twice for HIGH



2. To switch light off press for a third time